


Following these mounting instructions with the hardware included will be more than sufficient to support wall mounted installation.


Included Installation Hardware



x2 screw

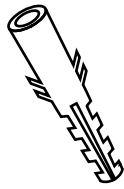


x2 wall anchor



x1 allen wrench


Tools You May Need

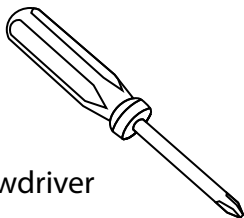


Screwdriver




Level

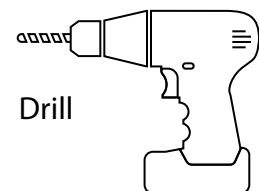

Drill

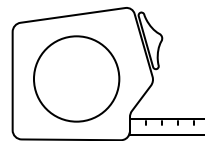

Tape Measure


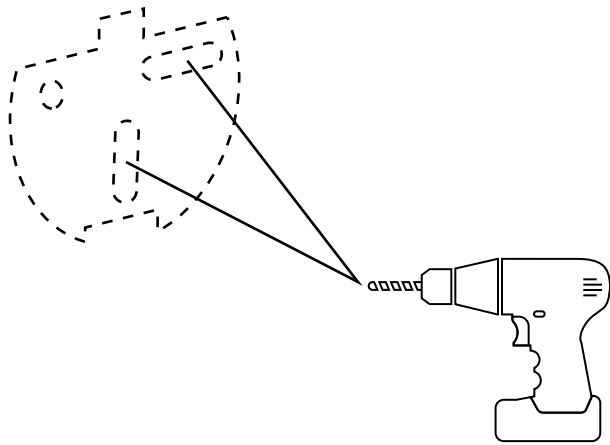


1. Drill Anchor Holes

Identify installation location. Mark mounting bracket on wall and drill holes the size of the anchors.

2. Install Anchors

Tap anchors into predrilled holes.

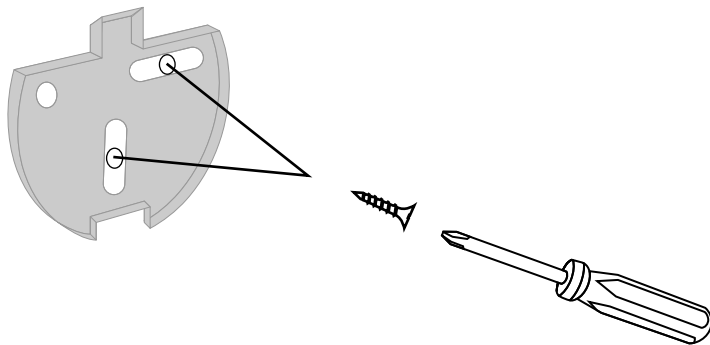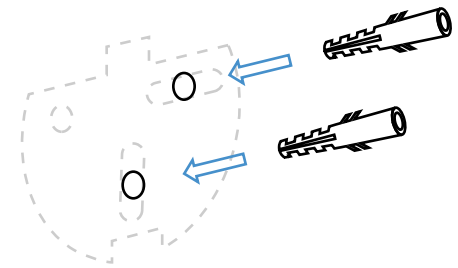

3. Mount Bracket

Mount bracket with screws.

4. Mount Hook

Install bathroom hook over mounting bracket and tighten with allen wrench.

