INSTALLATION INSTRUCTIONS

For 1000004539 - Wall Plate (High-Low) For 1000004570 - Wall Plate (Low-High)

Wall plate kits 1000004539 and 1000004570 are designed for use with EZ(S)TL, EZOSTL, LZ(S)TL, LZOSTL, and HTVZBL style models.




Use Kit #1000004539 when units are mounted in the high-low configuration.




Use Kit #1000004570 when units are mounted in the low-high configuration.

Installation steps:

- Locate and mark holes for the wall plate type and hanger bracket panel per Fig 1.
- Make sure wall plate cutouts match wall openings. Drill holes.
- Assemble wall plate by attaching top and bottom supports with double stick tape per Fig 1.
- Fasten hanger bracket panel to wall.
- Place wall plate assembly onto hanger bracket and align holes.
- Attach water coolers to wall plate.

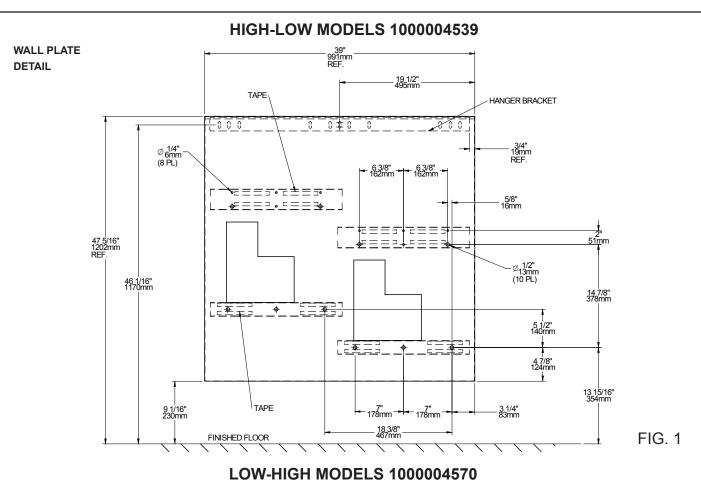

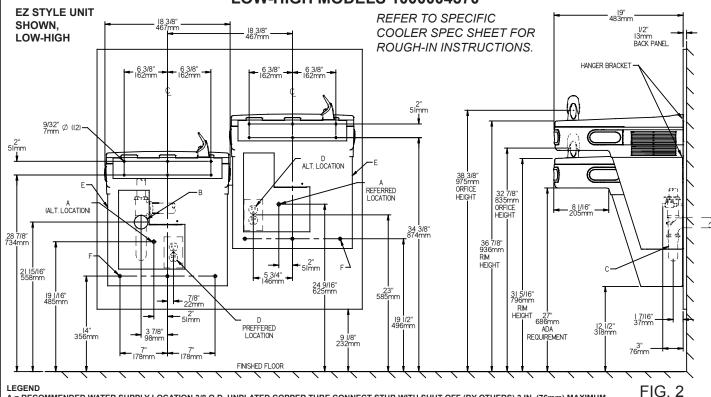

A = RECOMMENDED WATER SUPPLY LOCATION 3/8 O.D. UNPLATED COPPER TUBE CONNECT STUB WITH SHUT OFF (BY OTHERS) 3 IN. (76mm) MAXIMUM OUT FROM WALL PLATE.

- B = RECOMMENDED LOCATION FOR WASTE OUTLET TO ACCOMADATE 1-1/2" NOMINAL DRAIN. DRAIN STUB 2 INCHES OUT FROM WALL PLATE.
- C = 1-1/2 TRAP NOT FURNISHED*
- D = ELECTRICAL SUPPLY (3) WIRE RECESSED BOX DUPLEX OUTLET.
- E = INSURE PROPER VENTILATION BY MAINTAINING 6" (152 mm) (MIN.) CLEARANCE FROM CABINET LOUVERS TO WALL PLATE. F = 7/16 BOLT HOLES FOR FASTENING UNIT TO WALL.

www.elkay.com www.halseytaylor.com

For Technical Service, please contact us at 1.800.476.4106

PRINTED IN U.S.A